

LEVELtrol II Setup Software

Setup and Monitoring Software for LEVELtrol II Level Computers

KEP introduces the new setup software for LEVELtrol II (LT2) level computers. The setup software permits users to create, save, open, download, upload, and print the setup information for a LT2. The software also let's you view the results of the tank level measurement and volume/mass content calculations using a PC Compatible and Windows.

In addition, the LEVELtrol II is now supported by an enhanced version of the TROLlink remote metering software.

Setup is simple with easy pop-up tab menu fields containing "click and choose" and "fill in the blank" setup prompts!

Strapping table

Pt #	Level in	Volume gal
Pt # 1	0.0000	0.0000
Pt # 2	0.0000	0.0000
Pt # 3	0.0000	0.0000
Pt # 4	0.0000	0.0000
Pt # 5	0.0000	0.0000
Pt # 6	0.0000	0.0000
Pt # 7	0.0000	0.0000
Pt # 8	0.0000	0.0000
Pt # 9	0.0000	0.0000
Pt # 10	0.0000	0.0000
Pt # 11	0.0000	0.0000
Pt # 12	0.0000	0.0000
Pt # 13	0.0000	0.0000
Pt # 14	0.0000	0.0000

Setup / Input / Tank and Level

Level Sensor Type: Delta P Level

Tank Shape: Table

Signal Response: Level

Low Scale: 0 lbs/in²

Full Scale: 0 lbs/in²

Tank Diameter: 10 in

Tank Length: 10 in

Sensor Location: 10 in

Discharge Location: 10 in

Averaging Const: 0

Vol. Conversion Factor: 1 in³/gal

[Click Here to Download
LEVELtrol II Setup Software](#)

[Click Here to Download
LEVELtrol II Datasheet \(PDF\)](#)



KESSLER-ELLIS PRODUCTS 10 Industrial Way East, Eatontown, NJ 07724
800-631-2165 • 732-935-1320 • Fax 732-935-9344 • <http://www.kep.com>